


RS232 Remote Control Diagram

Monitoring remote display status

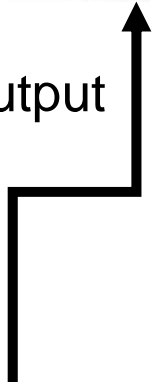

VGA output



PC

Sending RS232 Commands



OSD actions according to RS232 Commands

VGA output



Public Display material

我的電腦

簡報1

Computer

WorkFlow ERP
系統



MS_RS232

公司: Winmate
檔案版本: 1.0.0.1
建立日期: 2007/10/17 上午 09:35
大小: 252 KB



Click MS_RS232 icon

我的電腦


簡報1

Computer

WorkFlow ERP
系統

1

1. Set up Serial Port
2. Set up Baud Rate as "115200"
3. Click "Connect" Button

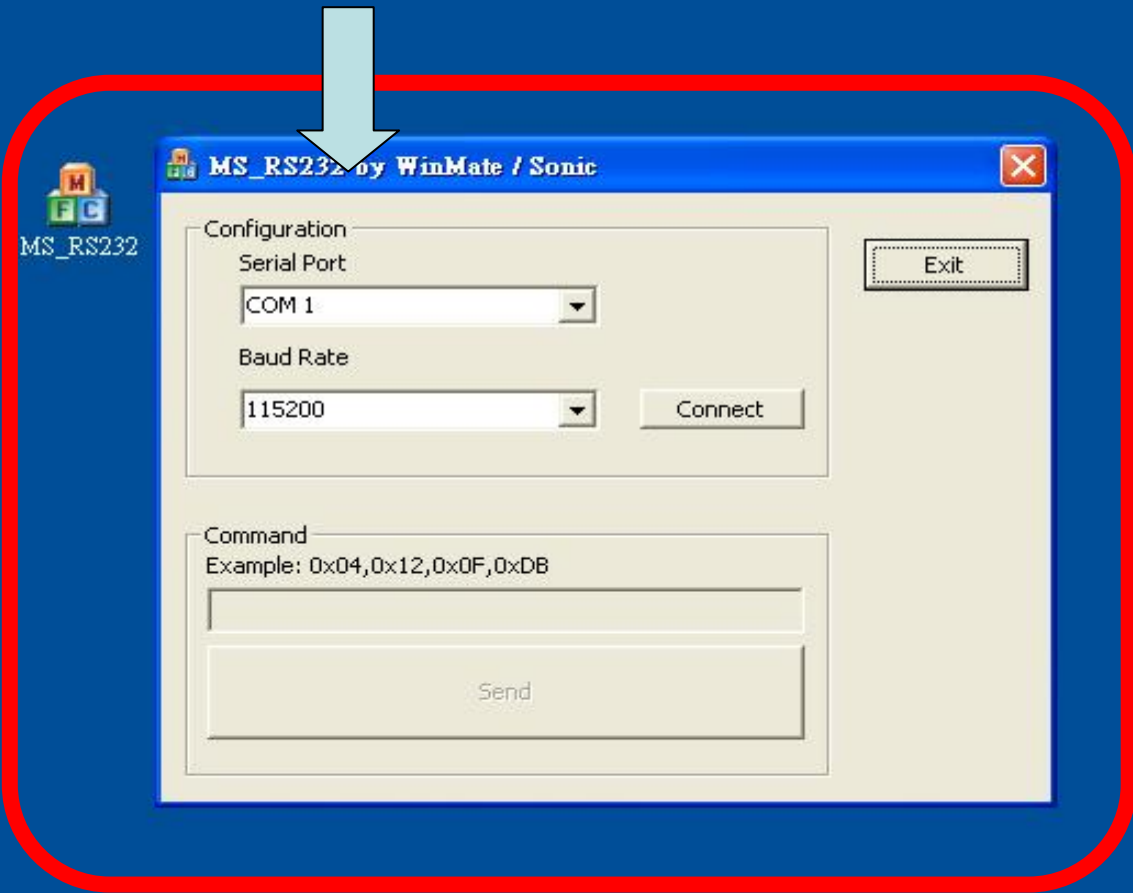



我的電腦



簡報1



Computer



Workflow ERP
系統



1



2

1. Enter Command code
2. Click "Send" button

